

Audio/Visual equipment supplied by:



OUC Youth

believe. belong. become.



DVD Player




TV Display
HDMI 1



Sound Bar
D. In

1. The DVD player is already hooked up. Ensure that it is turned on by pressing the **i** button on the DVD player.
2. Turn on the TV display by pressing the **i/I** button.
3. Press the **INPUT** button on the front of the *Toshiba TV* to set the Input to **HDMI 1**

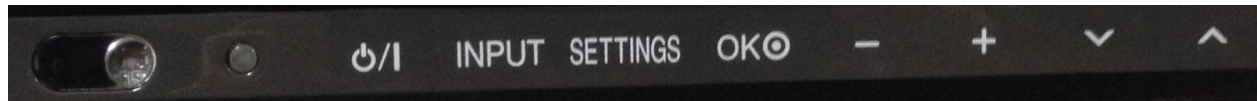

4. Turn on the Soundbar by pressing the **i** button. Then press the **F.** button on the top of the *Samsung Soundbar* or the [**SOURCE**] button on the remote control to set the mode to **D.IN**

